computar

GB

instruction manual

CS4S & CS8S Slave Selector

F

manuel d'installation

Sélecteurs esclave CS4S & CS8S

D

Benutzerhandbuch

Neben-Umschalter CS4S und CS8S

I

manuale di installazione

Commutatori secondari CS4S & CS8S

Installation Instructions for CS4S & CS8S Slave Selector

1) IMPORTANT SAFETY INSTRUCTIONS

Before commencing with the installation of this equipment read these instructions carefully and act on the information herein.

Never attempt to gain access to the equipment without first disconnecting the power supply to the unit.

Consideration should be given as to the correct installation of the unit. The equipment has been designed for indoor use only and must not be installed in any situation where air flow around the unit is restricted, where there are strong heat sources (such as intense direct sunlight, radiators etc.) or in areas of extreme cold.

Before siting the unit, ensure that the user can operate the equipment comfortably without causing repetitive strain. Each unit has been designed to minimise the amount of user fatigue that may be caused during normal operation.

Never operate the equipment with damp or wet hands.
Do not push any objects into openings.

Do not use the equipment whilst drinking or allow the equipment to be used near to areas which may get wet. Spillages invariably cause damage to the unit and may result in personal injury.

Only use the power supply unit that was supplied with your switcher. Do not use this power supply for any other purpose. **Failure to comply may result in damage or serious injury.**

2) Unpacking

Carefully unpack your Video Switcher. Your package should contain the following items:-
1 off Slave Selector (CS4S or CS8S)
2 off RJ45 terminal boxes
2 off RJ45 interface leads 1m long
These Instructions

If any item is missing or damaged DO NOT ATTEMPT TO USE THIS EQUIPMENT. Contact your supplier immediately. Retain the packing material.

3) Installation of CS4S & CS8S Slave Selectors

The Slave selector must be connected to a CS4.2P, CS8.2P or CS16.4P Video Switcher using the terminal boxes and interface leads supplied. Connect these as shown in diagram.

Connection of Slave Selector to Switcher

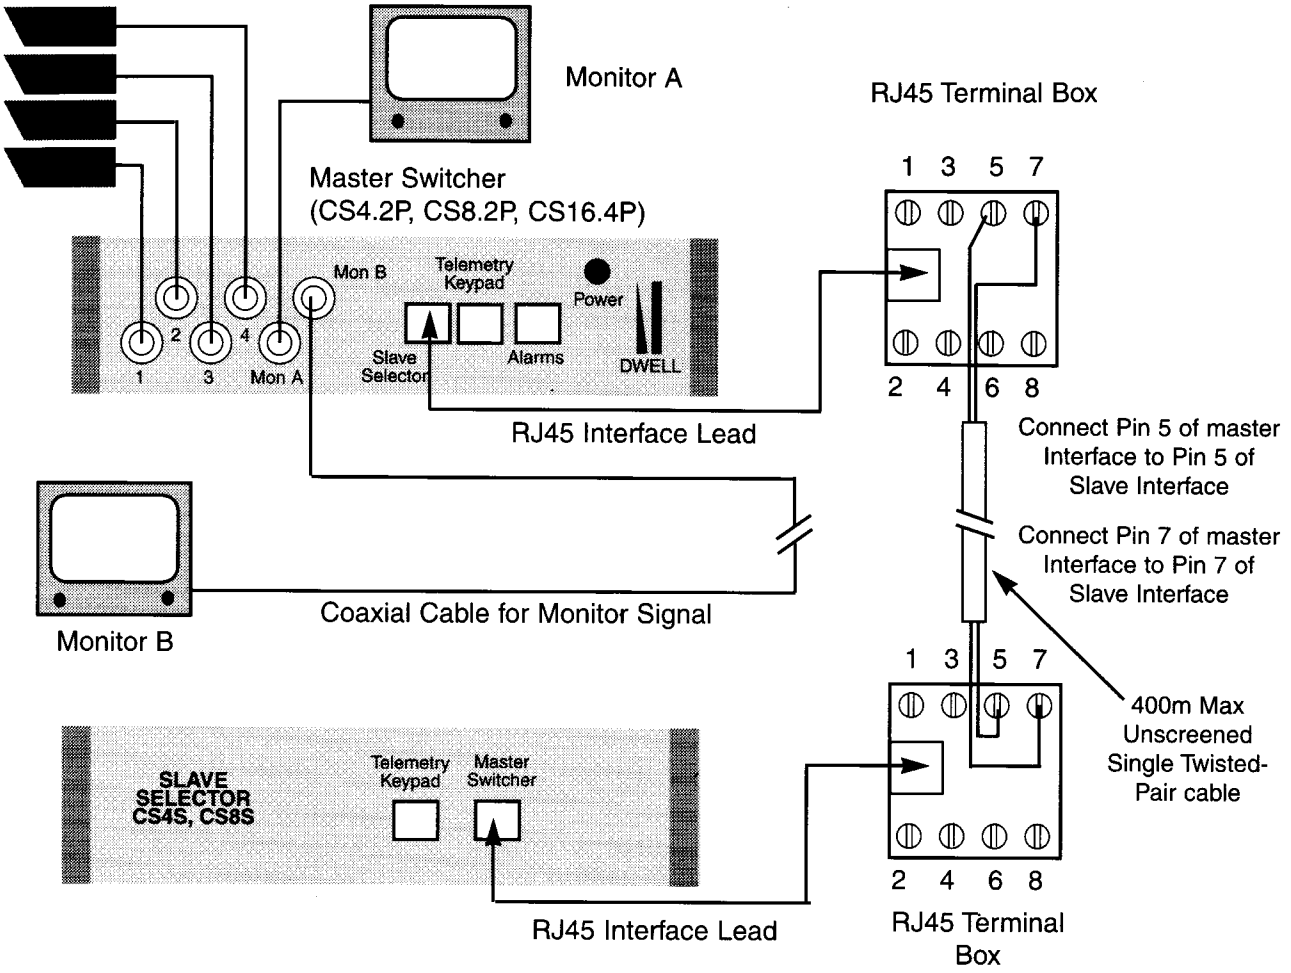

4) Specification

Master/Slave Connection

Single unscreened twisted-pair cable type Belden 8205 or equivalent. Maximum cable distance 400m using recommended cable type. One coaxial cable for each monitor at the slave is also required.

Sequence

Adjustable from approximately 1 to 60 seconds using potentiometer on Premium switcher. Independently programmable skip of cameras in sequence

Power Supply

Slave selector powered by associated premium switcher.

Weights

CS4S 0.95Kg CS8S 1.15Kg

Dimensions

Height 47mm (including feet)
Depth 204mm (excluding mating connectors)
Width 180mm (CS4S) 256mm (CS8S)

Operating Instructions for the CS4S & CS8S Slave Selector

Note that brief instructions for using the switcher can also be found on the underside of the unit.

To select a Camera to the Monitor:-

Press the button above the number of the required camera. The light above the button will light to indicate which camera is currently selected for display on the monitor.

To Display a Sequence of Cameras on the Monitor:-

Press the 'AUTO' button. The light above the 'AUTO' button will come on to indicate that the sequence is running and the monitor will show a sequence of cameras.

The time for which cameras are shown in a sequence (the dwell time) can be adjusted from approximately 1 second to 60 seconds at the premium switcher. Follow the instructions below to change the current dwell time setting.

Which cameras are displayed when the sequence is running can be altered. To include or exclude cameras in a sequence refer to the section below.

To Stop a Sequence

Press any Camera Select button. Whichever camera is selected will appear on the monitor and the light above the 'AUTO' button will go out.

To change the current Dwell-Time Setting

Adjust the potentiometer on the rear panel of the Premium switcher. With the pot. at the highest setting, the dwell time will be approximately 60 seconds and at the lowest, approximately 1 second.

To include or exclude Cameras in a sequence

Press and hold down the 'SKIP' button. The lights above the camera select buttons of the cameras currently included in the sequence will illuminate.

Whilst still holding the 'SKIP" button, pressing a camera select button will include or exclude that camera in the sequence.

Instructions d'installation pour le sélecteur esclave CS4S & CS8S

1) INSTRUCTIONS DE SECURITE IMPORTANTES

Avant de commencer l'installation de cet équipement, lisez soigneusement les instructions suivantes et suivez les informations ci-après.

N'essayez jamais de d'accéder à l'équipement sans d'abord déconnecter l'alimentation de l'appareil.

Prenez garde à installer l'appareil correctement. L'équipement a été conçu pour être utilisé à l'intérieur uniquement et ne doit en aucun cas être installé là où la circulation de l'air autour de l'appareil est restreinte, à proximité de fortes sources de chaleur (comme par exemple la lumière directe du soleil, un radiateur, etc...) ou dans des endroits exposés à un froid extrême.

Avant d'installer l'appareil, assurez-vous que l'utilisateur peut commander confortablement l'équipement sans subir de tensions répétitives. Chaque appareil a été conçu pour minimiser la somme de fatigue de l'utilisateur pouvant survenir dans des conditions de fonctionnement normales.

Ne faites jamais fonctionner l'équipement quand vous avez les mains humides ou mouillées.
N'introduisez aucun objet dans les ouvertures.

N'utilisez pas l'équipement dans des zones humides. Tout liquide renversé endommagera l'appareil et pourrait provoquer un accident.

Utilisez uniquement le bloc d'alimentation fourni avec votre sélecteur. **Le non-respect de ces instructions peut entraîner des dommages ou de sérieux accidents.**

2) Fourniture

Déballez votre sélecteur vidéo avec précautions. Votre emballage doit contenir les articles suivants :

1 Sélecteur esclave (CS4S ou CS8S)
2 borniers RJ45
2 câbles d'interface RJ45 d'1m
Les présentes instructions

Conservez l'emballage.
En cas d'article manquant ou endommagé, N'ESSAYEZ PAS D'UTILISER CET EQUIPEMENT. Contactez votre distributeur immédiatement.
Conservez l'emballage.

Chugai Boyeki (UK) Ltd
Computar House
6 Garrick Industrial Centre
Garrick Road
London NW9 6AQ
Tel: +44 (0) 181 732 3333
Fax: +44 (0) 181 202 3387

Chugai Boyeki (UK) Ltd
Paris Branch
15/33 rue Le Corbusier
94035 Creteil Cedex
Paris, France
Tel: +33 (1) 43 99 04 24
Fax: +33 (1) 43 99 59 06

Chugai Boyeki (UK) Ltd
Ufficio di Milano
Via Carolina Romani, 1/11
20091 Bresso (MI) Italy
Tel: +39 2 665 03210
Fax: +39 2 665 03204

Chugai Boyeki (Deutschland) GmbH
Willstätter Straße 1
40549 Düsseldorf
F.R. of Germany
Tel: +49 211 596379
Fax: +49 211 591923
Telex: 8584087 LUCKY D